



# Designer Décor® Collection

by Mattress Safe®

## Avant - Garde Solutions for the Box Spring

### Contour Wrap® - DCW

**Streamlined Design with Contouring Sidewalls and Seamless Corners**

A designer fabric sidewall is held in place with a stretch knit decking on top and elastic edging under and around the bottom of the box spring to create a secure fit.


Sawgrass Caramel

#### Our Signature Stock Colors with Designer Fabrics

##### Shantung *Classic Silk Rendition*



##### Savile™ *Distinguished Woolen Appearance*

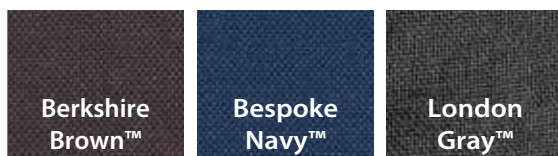

##### Sawgrass *Refined Linen Look*



- ◆ No Visible Seams
- ◆ Secure Fit that Maintains Position
- ◆ Smooth Contoured Corners & Sidewalls
- ◆ Durable Stretch Knit Decking



*Our products meet the standard requirements for leading brands in the hospitality industry.*

### Functionality Meets Elegance

Testing Standards for the Flammability of Mattress Safe® Fabrics.  
Shantung -100% Polyester FR Hybrid Passes Chapter 10 of NFPA 701-2010 & CA701  
Sawgrass -100% Polyester FR Hybrid Passes Chapter 10 of NFPA 701-2010 & CA701  
Savile -100% Polyester FR Hybrid Passes Chapter 10 of NFPA 701-2010 & CA701  
Stretch Knit -100% Polyester Stretch Knit Passes CFR Title 16 Part 1632 (FF4-72)



How to Install



Contact Your Distributor for Ordering Information

©2025 Mattress Safe, Inc. • DDCbedding.com • P: 770-205-5335

Made in USA with Import Fabric




# Designer Décor® Collection

by Mattress Safe®

Avant - Garde Solutions for the Box Spring

## Properly Measuring Your Box Spring

It is important to properly measure your box spring. **The Contour Wrap® is made especially according to your specifications and cannot be returned or exchanged.** Please use the following guidelines to measure correctly.

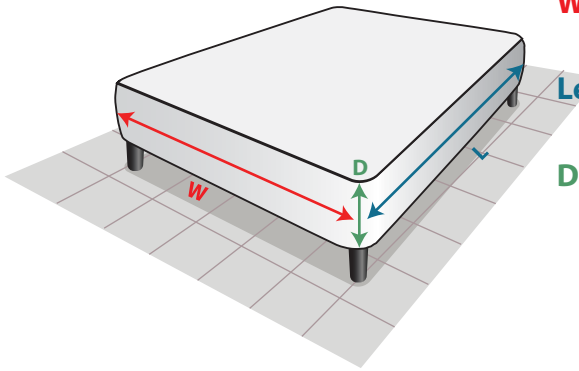

**Width:** Measure the width (in inches) of the box spring from side to side to the nearest 1/4 inch. *\*For Split King box springs, measure the width as one unit.*

**Length:** Measure the length (in inches) from the head of the box spring to the foot of the box spring to the nearest 1/4 inch.

**Depth:** Measure the height of the box spring (in inches) from the bottom of the box spring to the top to the nearest 1/4 inch.

## Mattress and Box Spring Sizes

Mattresses and box springs can vary slightly in size.

Long Full 52-54"W x 78-80"L

Queen 58-60"W x 78-80"L

King (combined box springs) 74-76"W x 78-80"L

Hotel King (combined box springs) 70-72"W x 78-80"L

### Depths:

7" will fit box springs with a height of 5.5" to 7.5"

9" will fit from 7.75" to 9.5"